# SPANSET EXOSET LIFTING CLAMP

# WHAT DO I NEED TO KNOW?

#### Maximum W.L.L. Indicator

- Check this before every lift.
- Confirm the load weight is within the WLL.
- · Never exceed the indicated rating.

#### **Inspect Regularly**

Frequently check the clamps before each use to help ensure they are in proper working conditions.

#### **Pivot Points**

- All moving joints must be clean and well-
- Dirt buildup can prevent proper movement.
- Confirm free and smooth motion before each use.

#### **Body & Grip**

- Powder-coated for corrosion resistance.
- · Check for dents, cracks, deformation, or paint loss.
- Surface rust or body damage can reduce strength remove from service if found.

#### **RFID (Optional)**

- Use for digital inspection tracking and recordkeeping.
- Speeds up audits.

800-334-7505

#### **Cam Segment**

- Inspect for wear, damage, or sticking.
- Replace using SpanSet Overhaul or Maintenance Kits.



Be sure to lubricate the sliding sections and the guide grooves like the hoisting eye shaft.



- Cam teeth are worn or broken.
- Handle does not lock or release properly.
- Jaw aperture does not close securely.
- · Pivot points are stiff or seized.
- · Hoisting eye is bent or stretched.
- Clamp shows signs of overload or misuse.
- RFID scan flags inspection issues.

#### **Optimized Hoisting Eye Shape**

- Designed for centered, stable lifting.
- Inspect for bending, elongation, or corrosion.



Use SpanSet Maintenance Kits to extend service life.



Store in a clean, dry place

## Large Latch

- Test for smooth operation during engaging and releasing.
- The handle must fully lock and unlock without force.

### **Jaw Aperture**

- Confirm the load thickness fits the clamp's marked range.
- Jaws must close securely around the material.

# **Overload Body Indicator**

- A quick visual tool for safety.
- Deformation of this area may indicate misuse or overload.
- Do not use if damaged.

#### **Documents**

Keep inspection records and manuals accessible.

Do not throw or drag clamps across the ground.

NEED HELP? For manuals, overhaul kits, spare parts, or technical questions.





